


GETTING STARTED

PCI-8212 for Windows NT 4.0


1

Insert the NI-488.2 CD, then choose **Install NI-488.2 Software for Windows**.

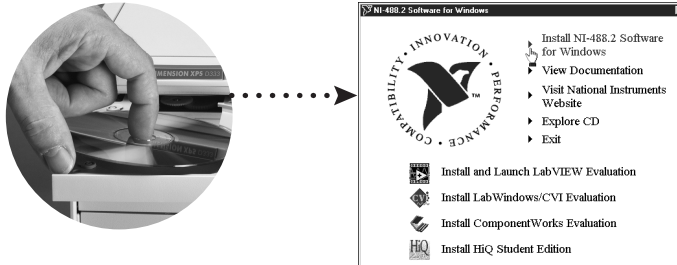


2

Shut down, then power off computer.

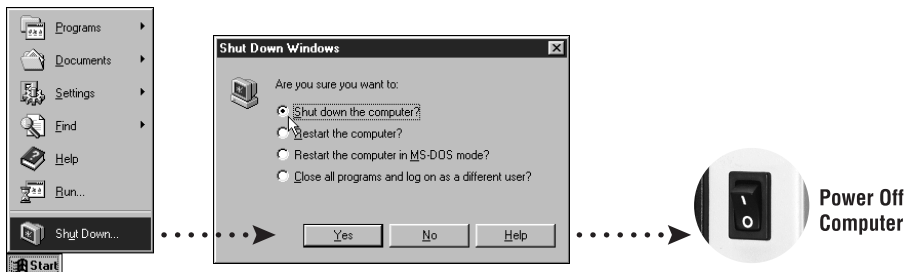

3

Install hardware* and cables, then power on computer.

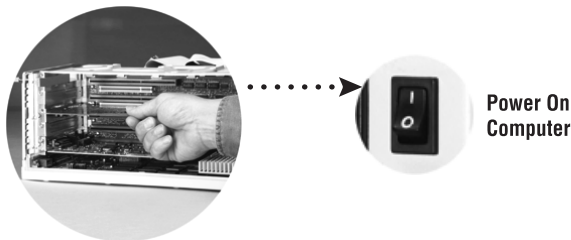


* **For Help** installing your hardware, refer to the *PCI-GPIB* topic in the *GPIB Hardware Guide* (available on the NI-488.2 for Windows CD through *View Documentation*).



Install the Windows NT 4.0 Driver.*


Select **Start»Settings»Control Panel»Network»Adapters** and click **Add**. Insert the PCI/PXI Ethernet Adapters CD and click **Have Disk**. Specify the appropriate drive and complete the installation.

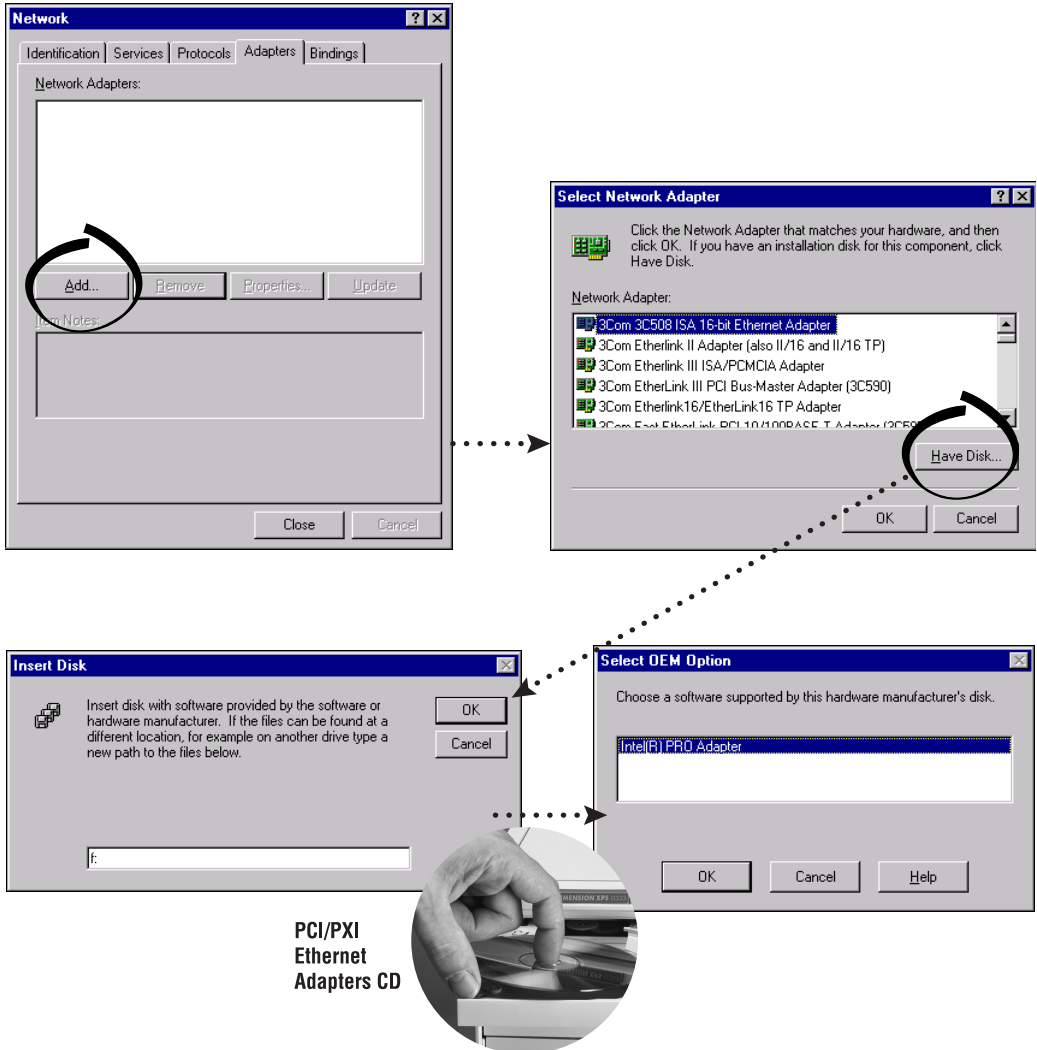

* **For Help** installing your driver, refer to the *PCI/PXI Ethernet Adapters Installation Guide* (available on the PCI/PXI Ethernet Adapters CD). The installation guide also contains cabling instructions and troubleshooting tips.


5

Restart computer, then connect to your network.

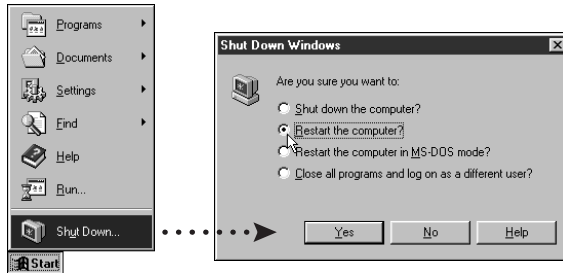

6

Run NI-488.2 Getting Started Wizard.

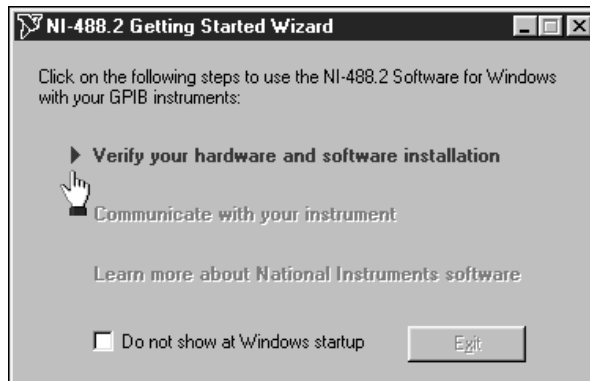



www.ni.com/support
www.ni.com/ask

Tel: (512) 795-8248 • Fax: (512) 683-5678 • ftp.ni.com

© Copyright 2000 National Instruments Corporation. All rights reserved. Product and company names mentioned herein are trademarks or trade names of their respective companies.



322726A-01

Ju100