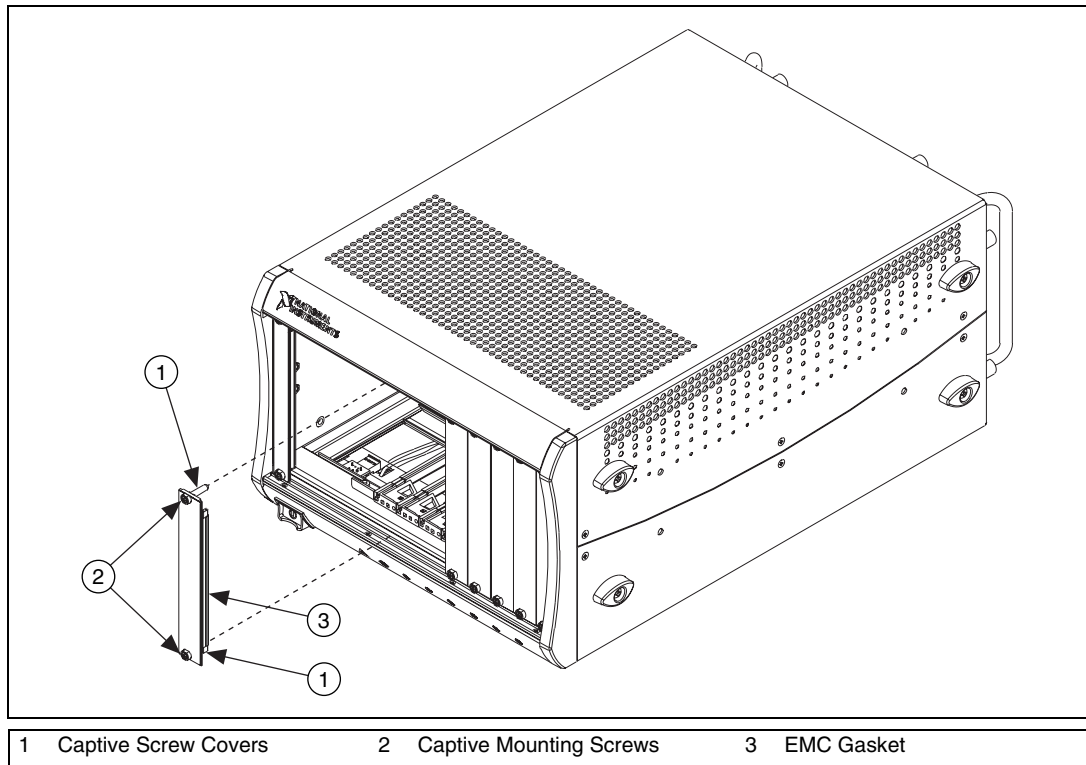


# PXI EMC Filler Panels Installation Guide

To install the EMC filler panels, follow the steps below Figure 1.



**Figure 1.** PXI EMC Filler Panels and Chassis

1. Remove the captive screw covers.
2. Install the filler panels by securing the captive mounting screws to the chassis as shown in Figure 1, making sure the EMC gasket is on the right side.



**Note** All slots must be populated with a module or filler panel to ensure proper module cooling. Do not over tighten screws (2.5 in.-lb maximum). For additional information on the use of EMC filler panels in your PXI system, visit [ni.com/info](http://ni.com/info) and enter `emcpanels`.

National Instruments™, NI™, and ni.com™ are trademarks of National Instruments Corporation. Product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your CD, or [ni.com/patents](http://ni.com/patents).

December 2002  
323554A-01